

# HEX36

---

## 3.0 DMX Allocation

6-CH	Function	Value	Setting
1	Red	000-255	0~100%
2	Green	000-255	0~100%
3	Blue	000-255	0~100%
4	Amber	000-255	0~100%
5	White	000-255	0~100%
6	UV	000-255	0~100%

8-CH	Function	Value	Setting
1	Dimmer	000-255	0~100%
2	Red	000-255	0~100%
3	Green	000-255	0~100%
4	Blue	000-255	0~100%
5	Amber	000-255	0~100%
6	White	000-255	0~100%
7	UV	000-255	0~100%
8	Strobe	000-010 011-255	NO Function Strobe slow to fast

12CH	Function	Value	Setting
1	Dimmer	000-255	0~100%
2	Red	000-255	0~100%
3	Green	000-255	0~100%
4	Blue	000-255	0~100%
5	Amber	000-255	0~100%
6	White	000-255	0~100%
7	UV	000-255	0~100%
8	Strobe	000-010	NO Function

**SHOWPRO**

# HEX36

9

Manual Colour + Colour Temperature

011-255	Strobe slow to fast
000-010	No Function
011-030	R 100%, G 0~100%, B 0%
031-050	R 100%~0%, G 100%, B 0%
051-070	R 0%, G 100%, B 0~100%
071-090	R 0% G 100%~0% B 100%
091-110	R 0%~100% G 0% B 100%
111-130	R 100% G 0% B 100%~0%
131-150	R 100% G 0%~100% B 0%~100%
151-170	R 100%~0% G 100%~0% B 100%
171-200	R 100% G 100% B 100% A100%
201-205	Colour temperature1
206-210	Colour temperature2
211-215	Colour temperature3
216-220	Colour temperature4
221-225	Colour temperature5
226-230	Colour temperature6
231-235	Colour temperature7
236-240	Colour temperature8
241-245	Colour temperature9
246-250	Colour temperature10
251-255	Colour temperature11

10

Function

Value

Setting

Auto

Sound Programs

000-051	No Function
052-101	Auto Program 1
102-152	Auto Program 2
153-203	Auto Program 3
204-254	Auto Program 4
255	Auto Program 0 (Auto1-5)

**SHOWPRO**

# HEX36

---

11	Function	Value	Setting
	Auto Speed	000-255	Speed Slow to Fast

12	Function	Value	Setting
	Dim Mode	000-051	Preset dimmer speed from display menu
		052-101	Dimmer speed mode off
		102-152	Dimmer speed mode1 (fast speed)
		153-203	Dimmer speed mode2 (middle speed)
		204-255	Dimmer speed mode3 (slow speed)