

## DMX Values

9-CH	Channel	Function	Value	Percent/Setting	
	1	Red	000 ○ 255	0–100%	
	2	Green	000 ○ 255	0–100%	
	3	Blue	000 ○ 255	0–100%	
	4	Amber	000 ○ 255	0–100%	
	5	Color Macros (overrides Ch. 1–4)	000 ○ 015	No function	
			016 ○ 255	Color macros	
	6	Strobe (when Ch. 7 is 000–031)	000 ○ 015	No function	
			016 ○ 255	Slow to fast strobe	
		Program Speed (when Ch. 7 is 032–223)	000 ○ 255	Slow to fast speed	
			Sound Sensitivity (when Ch. 7 is 224–255)	000 ○ 010	No function
		011 ○ 255		Low to high sensitivity	
	7	Mode	000 ○ 031	No function	
			032 ○ 063	Pulse effect 0–100%	When Ch. 1–4 are active
			064 ○ 095	Pulse effect 100%–0	
			096 ○ 127	Pulse effect 100%–0–100%	
			128 ○ 159	Auto fade transition	
			160 ○ 191	Auto snap transition (4 colors)	
			192 ○ 223	Auto snap transition (19 colors)	
			224 ○ 255	Sound triggering mode	
	8	Dimmer	000 ○ 255	0–100%	
	9	Dimmer Speed	000 ○ 051	Dimmer Speed set from display	
			052 ○ 101	Dimmer speed mode off	
			102 ○ 152	Dimmer speed mode 1 fast	
			153 ○ 203	Dimmer speed mode 2 medium	
			204 ○ 255	Dimmer speed mode 3 slow	

4-CH	Channel	Function	Value	Percent/Setting
	1	Red	000 ○ 255	0–100%
	2	Green	000 ○ 255	0–100%
	3	Blue	000 ○ 255	0–100%
	4	Amber	000 ○ 255	0–100%